

HI6200 Series Firmware Update

INSTRUCTIONS:

Download the latest firmware from hardysolutions.com under the Docs and Programs pages of the 6200.

NOTE: There are separate firmware files for PROFINET or EIP.

Once downloaded to your computer, it will need to be uploaded to the unit via the unit's webpage.

The default IP address for logging into the webpage of your HI6200 is: 192.168.000.100

NOTE: Your unit IP address may vary.

On the main webpage of the unit, click Monitor.

On the URL line of your browser, replace

192.168.000.100/operation/**Monitor**.cgi with

192.168.000.100/operation/**AutoUpdate**.cgi



Click the "Go to code update page" button to get to the login screen:

The screenshot shows a login screen with the title "Login". The instructions are: "Enter user ID and password: Enter a null user ID and password to reset back to the original program." There are input fields for "User ID" and "Password", and a "Login" button.


Enter the login:

User ID: admin

Password: updatepass

Click Login


Once logged in, you will need to choose your downloaded firmware file.
Click Choose File.

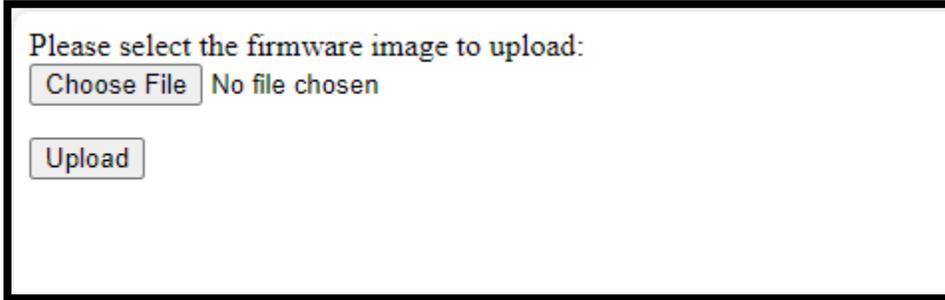

Please select the firmware image to upload:

No file chosen

Locate your file for uploading.
NOTE: There is PROFINET OR EIP Firmware.

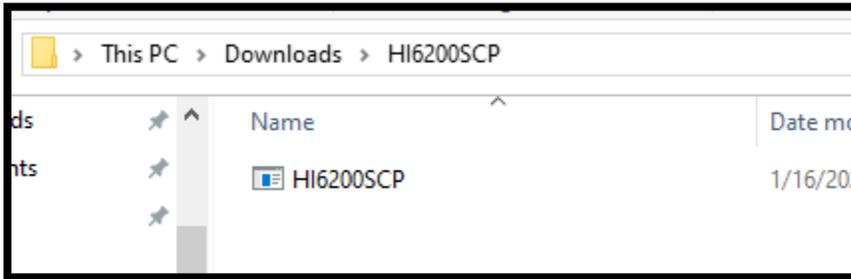


Please select the firmware image to upload:

HI6200SCP.bin

Once selected, click Upload. Your firmware may take up to 30 seconds to complete.

Once uploaded, it is important to power cycle the HI6200 for the firmware installation to complete.

Example Screenshot of HI6200 with WaverSaver+:

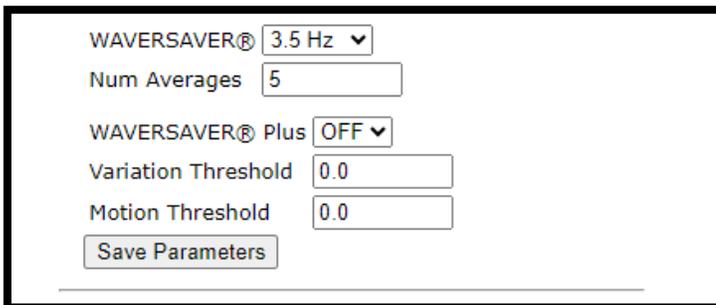

WAVERSAVER® 3.5 Hz ▾

Num Averages 5

WAVERSAVER® Plus OFF ▾

Variation Threshold 0.0

Motion Threshold 0.0